


## PARTS LIST

REF. NO.	DESCRIPTION	PART NO.	QTY	REF. NO.	DESCRIPTION	PART NO.	QTY
1	Air Cap Retaining Ring	-	1	31	Air Inlet	-	1
2	Slip Ring	-	1	32	Colour ID Ring Kit (4Colours)	SN-26-K4	1
3	Air Cap	-	1	33	Air Inlet Kit	SN-9-K	1
4	Air Cap Retaining Clip	JGA-156-K5	1	34	Needle Packing	-	1
5	Retaining Ring Seal	-	1	35	Packing Spring	-	1
6	Aircap & Ring	See chart 1 p13		36	Packing Nut	-	1
7	Air Cap Retaining Ring & Seal	PRO-420-K	1	*37	Packing, Spring and Packing Nut Kit	SN-404-K	1
8	Fluid Nozzle Kit	See chart 2 p13	1	*38	Trigger Screw	-	1
9	Spray Head	-	1	39	Trigger	-	1
*10	Spray head Seal	SN-18-1-K2	1	*40	Trigger Stud	-	1
11	Spray head kit	SN-69-K	1	41	Trigger Stud & Screw Kit	SP617-CR-K	1
*12	Circlip	-	1	42	Airflow Valve	PRO-407-K	1
13	Valve Body	-	1	43	Circlip - Kit of 5	25746-007-K5	1
*14	O Ring	-	1	44	Valve Head	-	1
*15	Spreader Valve Pin	-	2	45	Washer	-	1
16	Spreader Valve Adjusting Knob	-	1	46	Valve Body	-	1
17	Spreader Valve Assembly	PRO-406-K	1	47	Valve Adjusting Knob	-	1
18	Front Valve Seal	-	2	48	Filter	KGP-5-K5	1
19	Valve Seat	-	1	49	Gravity Cup	-	1
20	Spindle	-	1	50	Gravity Cup Lid	GFC-402	1
21	Air Valve Spring	-	1	51	Drip Check Lid (kit of 5)	GFC-2-K5	1
22	Rear Valve Seal	-	1	52	Gravity Cup Kit	GFC-501	1
23	Air Valve Kit	PRO-471	1	*53	Air Valve Service Tool	-	1
24	Fluid Needle	PRO-301-K	1	54	Tool kit	SN-406	1
25	Needle Spring	-	1	<b>SERVICE PARTS</b>			
26	Spring Pad	-	1	Spray Gun repair kit (includes items marked *)		PRO-470	
27	Housing	SN-66-K	1	Seal and Pin Kit, kit of 5 (items 12, 14 and 15)		GTI-428-K5	
28	Fluid Adjusting Knob	SN-67-C-K	1	* Not included in the Gun Kit, only with ref 23			
*29	Needle Spring Kit	PRO-472-K3	1				
30	Gunbody	-	1				

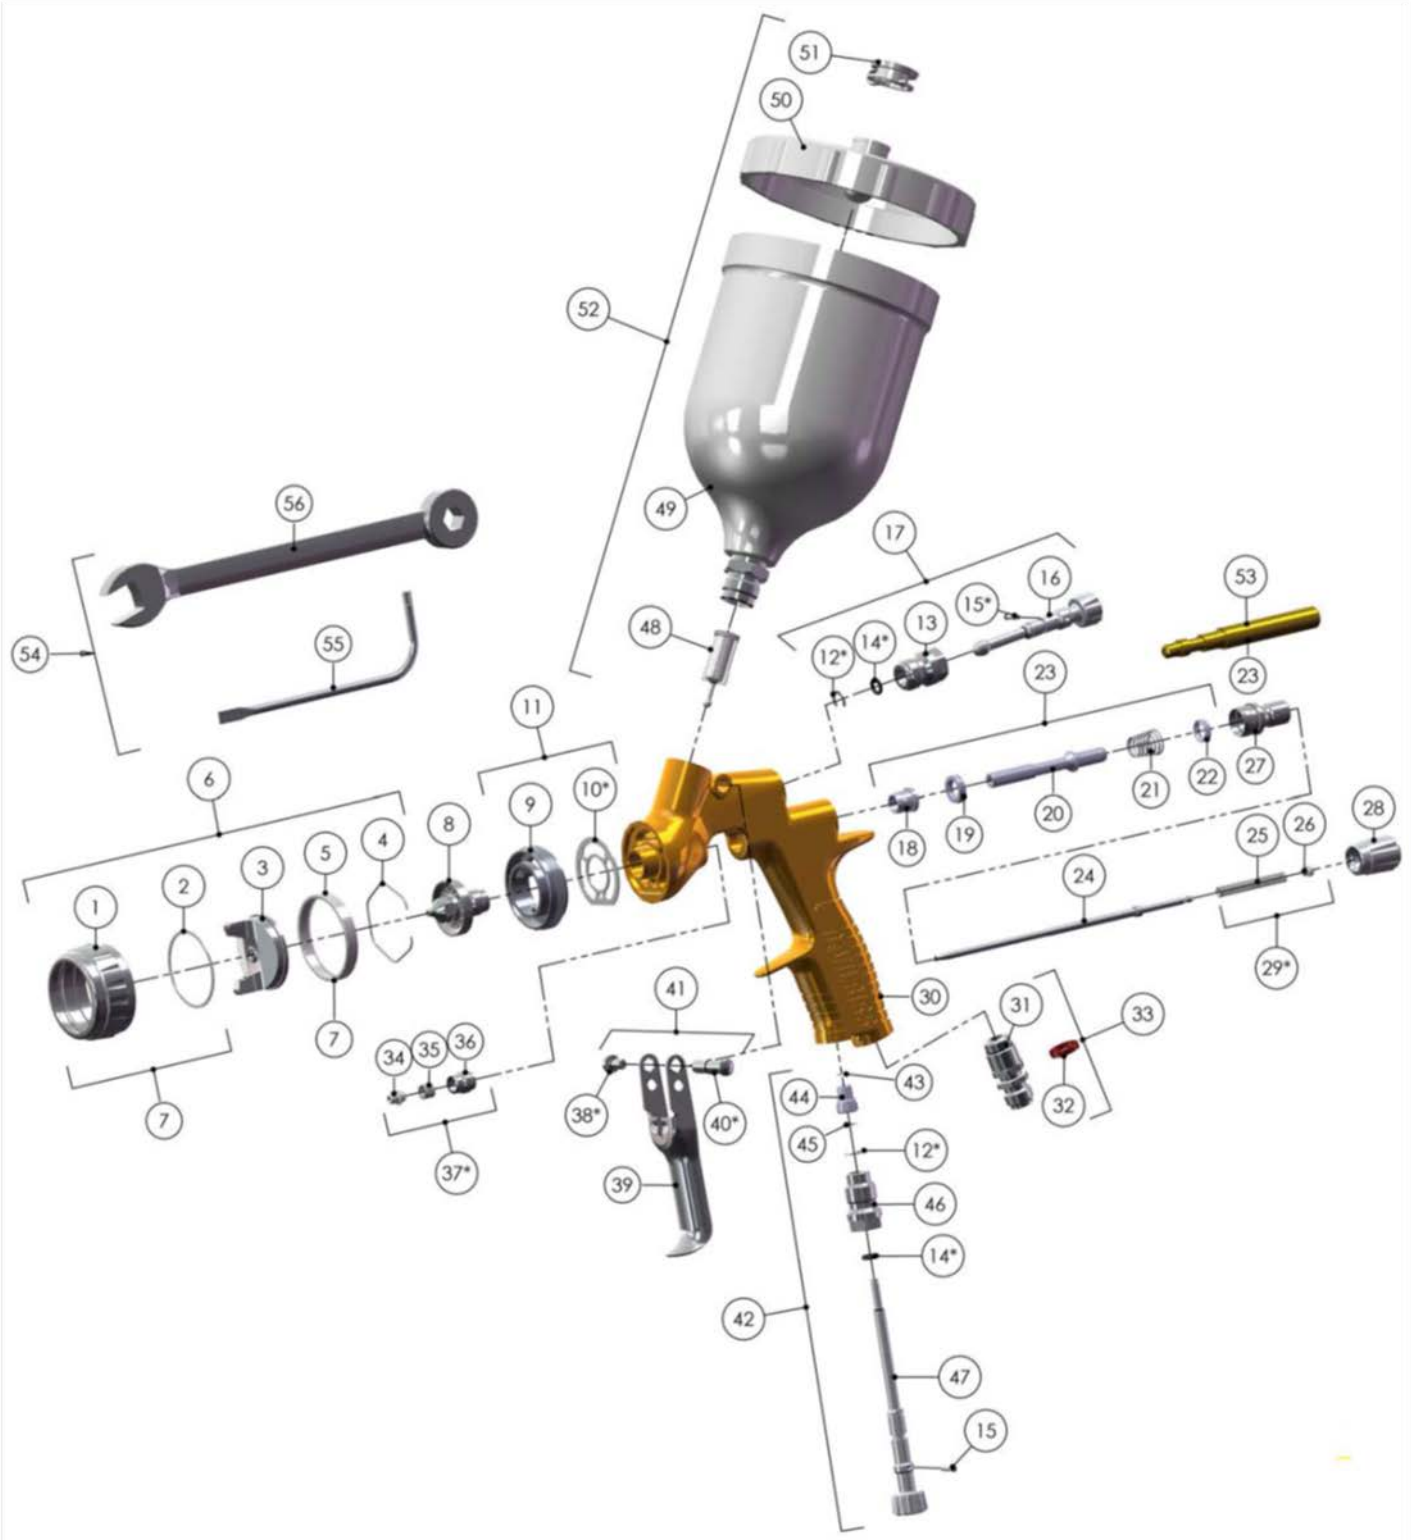

## Parts Replacement/Maintenance

### Chart 1 – Air Caps

PART No. FOR AIR CAP	TECHNOLOGY	MARKING ON AIR CAP	RECOMMENDED INLET PRESSURE (bar)	AIR FLOW (L/min) @ 2 bar
PROLT-GTE10-1314	LVMP	TE10	0.2	270
PROLT-GTE20-1314	LVMP	TE20	0.2	380
PROLT-GHV30-1314	HVLP	HV30	-	460
PROLT-GT110-1314	LVMP	T110	-	265

NOTE: When removing air cap from retaining ring, don't remove the Slip Ring (2) or Retaining Ring Seal (5) from the Retaining Ring. Damage to the parts may occur. Slip ring and Retaining Ring seal are not available as replacements. Simply wipe parts clean and reassemble with new or clean air cap.

### Chart 2 – Fluid Nozzle Range & Fluid Needle

PART No. FOR FLUID NOZZLE	PART No. NEEDLE
PRO-200-12-K	PRO-301-K
PRO-200-13-K	
PRO-200-14-K	

NOTE: When replacing the fluid nozzle or fluid needle, replace both at the same time. Torque to 18–20 Nm (160–180 lbs.in). Do not over tighten the fluid nozzle. Use SN-28 (56) 10mm Spanner supplied with the gun and check with a torque wrench.